





# AURAL-M2

## MCU Installation Procedure

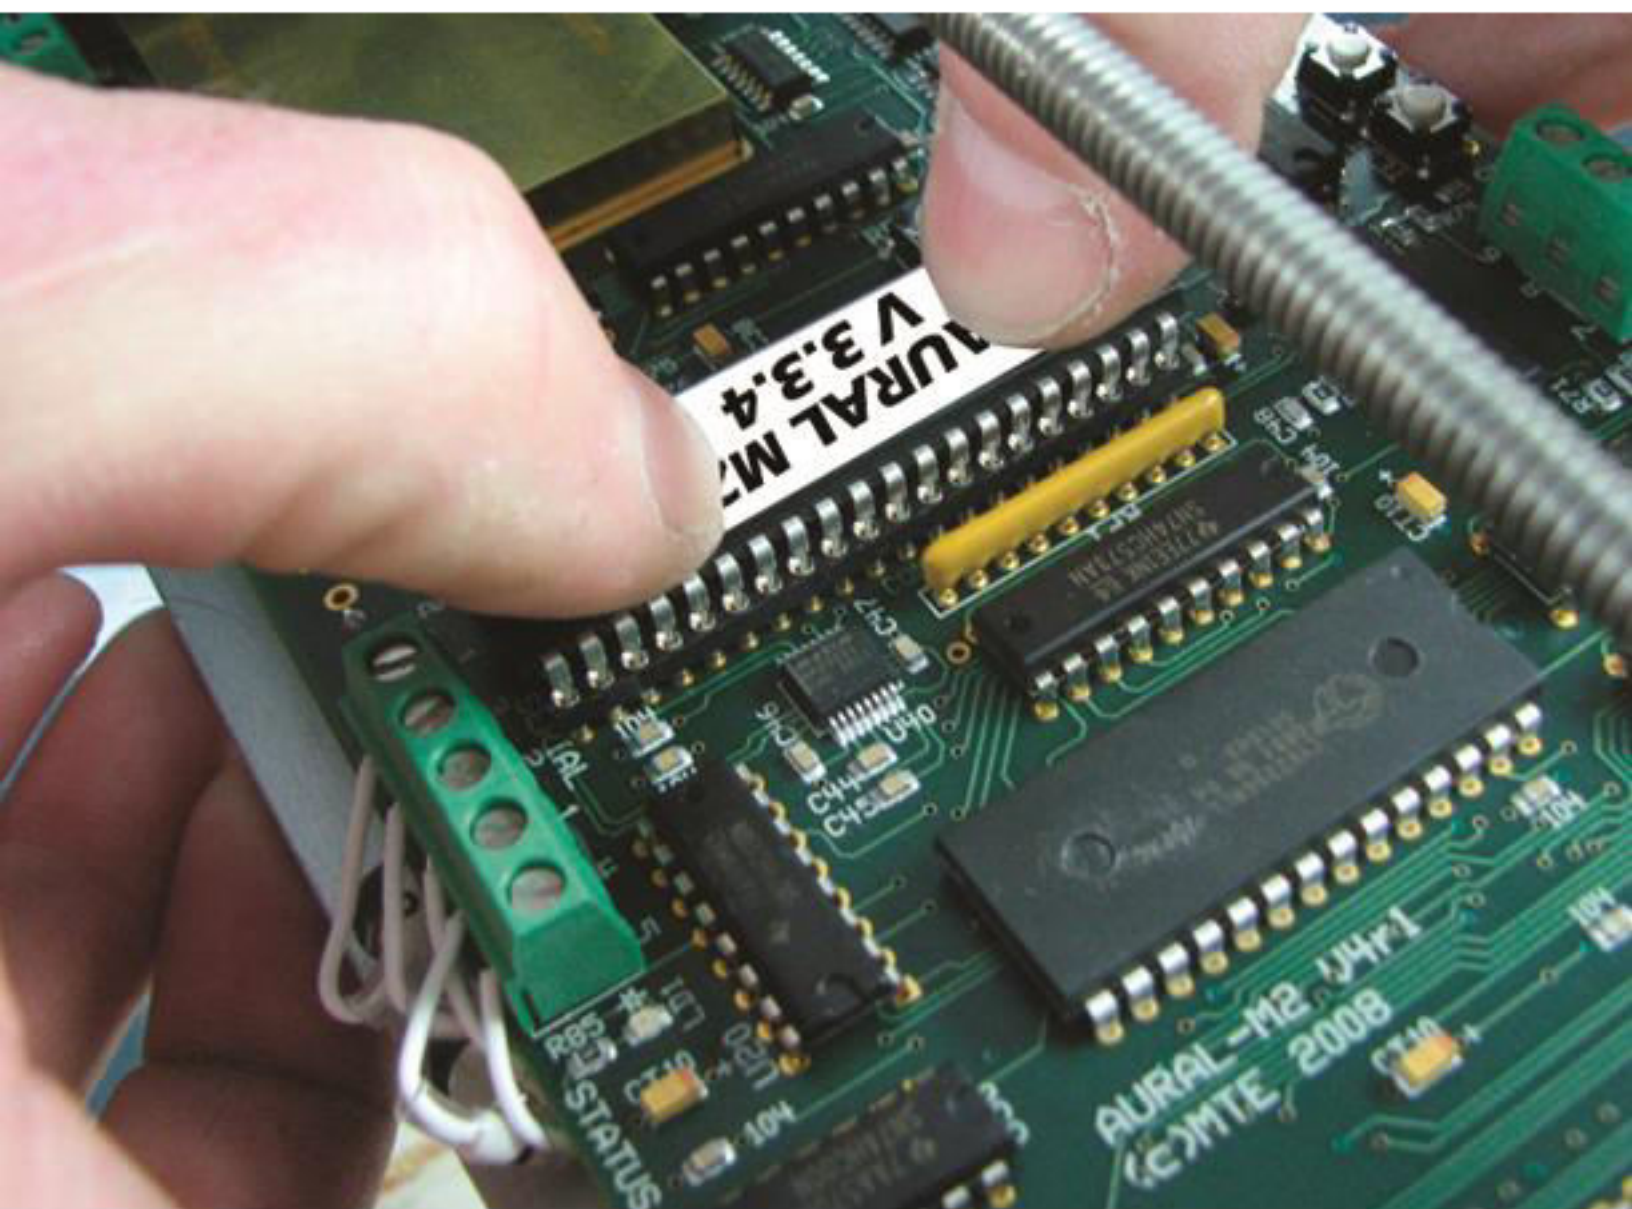

1. Open the AURAL

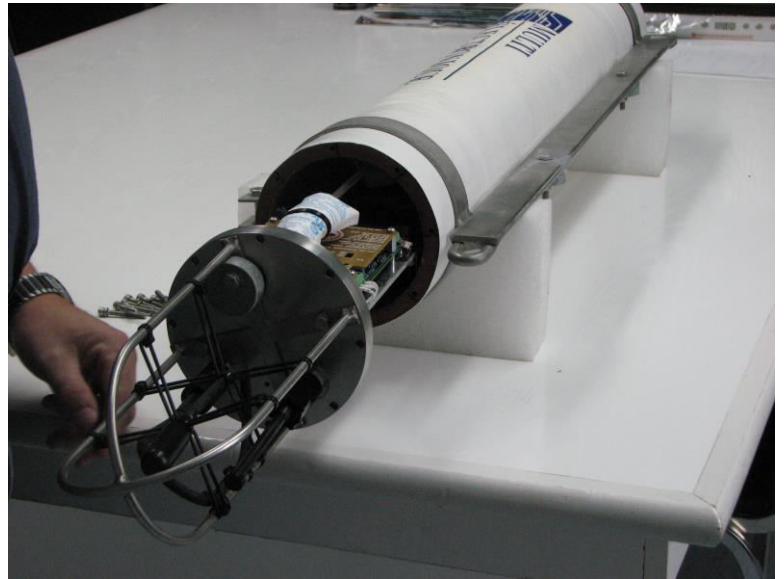


2. Wear a grounded bracelet to avoid static discharge

The components in AURAL are sensitive to static discharge.




3. Turn off the unit

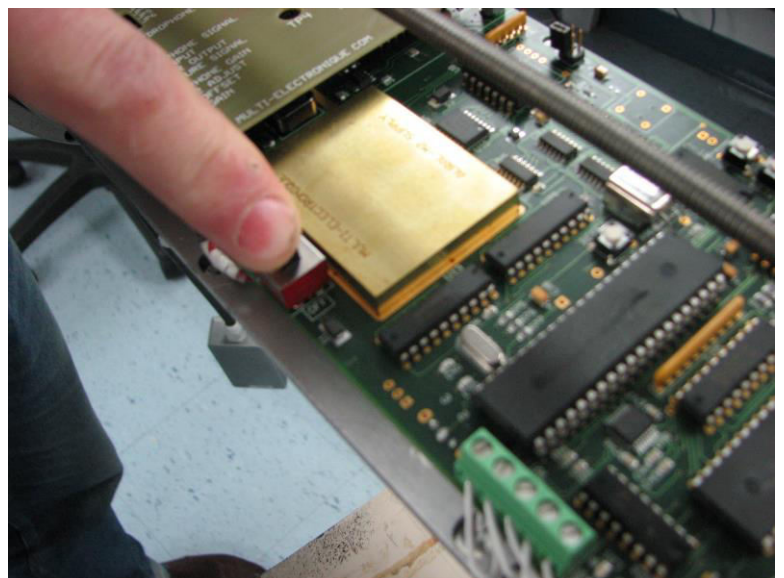




4. Use a flat screwdriver to pull out the MCU from both extremity a bit at a time


Be careful to not damage the stand.

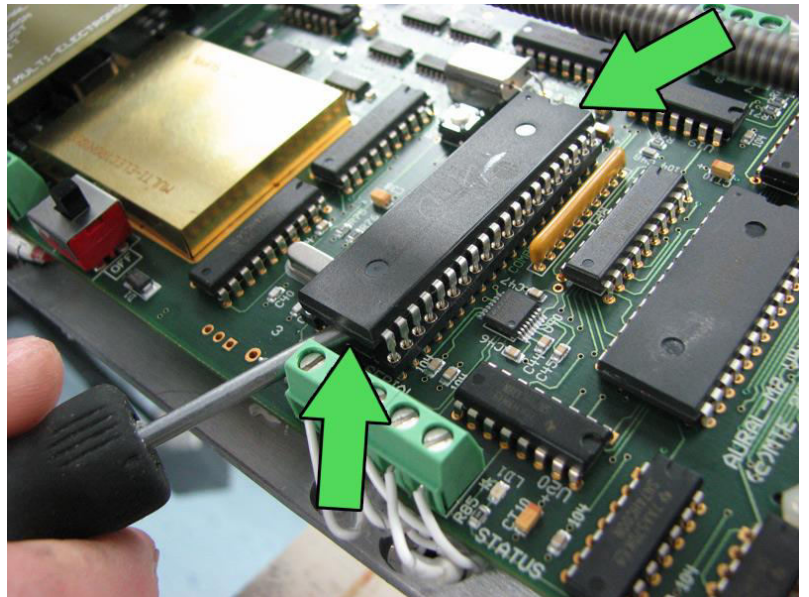


5. Remove with care

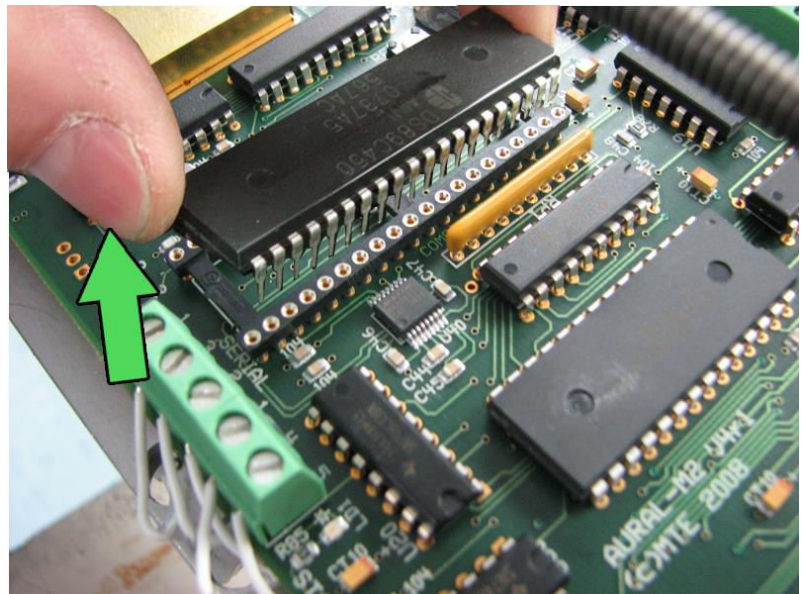

6. Align the new MCU in holes

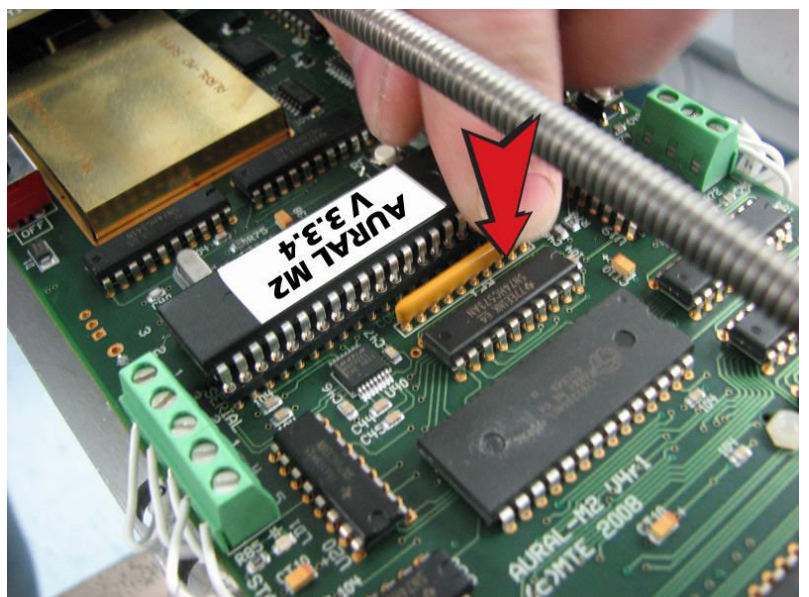

7. Apply a small pressure to enter the pins in the holes

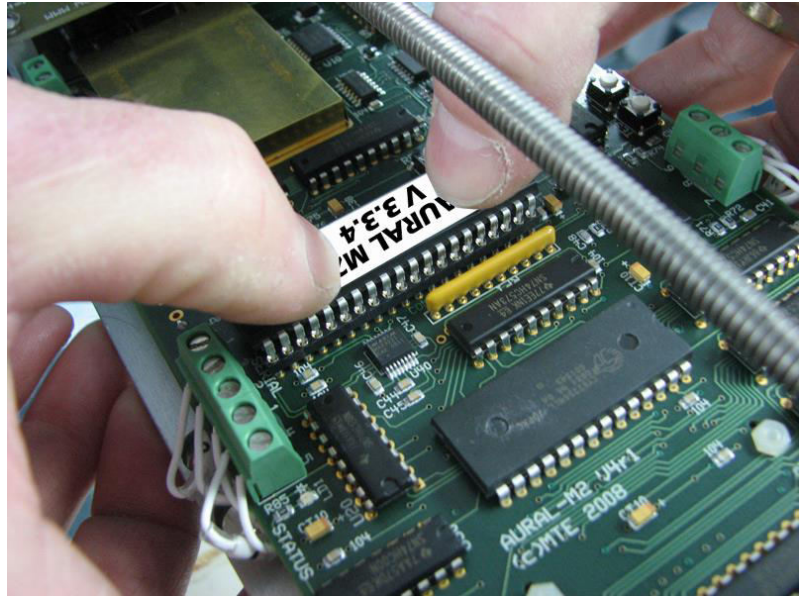

8. Inspect each pins to make sure it is well installed

If a pin is badly installed, remove MCU, straight up the pin and start over.



The MCU replacement is now done.