

AURAL-M2

Get it ready for storage (Simplified guide)

1. Thoroughly rinse AURAL external parts with fresh water

Immediately after a mooring, rinse the device to remove the salt water that could create corrosion on stainless steel components.

2. Look for any notable trace of corrosion

Contact Multi-Électronique in case of water infiltration or if the unit was damaged.

Refer to page 13* for cylinder opening

3. Remove and discard the batteries

4. Remove the Hard Disk and recover your files (refer page 17 et 42*)

Handle the Hard Disk with care. To prevent static discharges, insert the Hard Disk and a desiccant bag into an antistatic bag. You can also install it in the external Hard Disk Case provided.

5. Insert a couple of desiccant bags to prevent moisture (refer page 14*)

Refer to page 14* for cylinder inspection and closing

6. Close the AURAL cylinder (you don't need to completely tight the screws)

7. Store the AURAL in its original box

It should be store in a safe place at tempered rom temperature. Too cold or too warm temperature could create strain on many part that may result in damage.

*Please note that the reference page number is based on the most up to date AURAL-M2 User Guide on our web site, available to download.

Multi-Électronique can store your AURAL for you.
The device must be sent in its original shipping box.
Contact us for more information